

MSR₂ – MERIDIAN SYSTEM REMOTE


Instructions

The tables below show the basic functionality of the keys on the remote control. The specific behaviour of some products can vary according to the particular combination of products within a system. Full explanations of such functionality can be found in the user guides for the products in question.

In addition to their prime functions, many of the keys on the remote control have secondary or “shifted” functions. These are accessed by holding down the “Fn” (Function) key, while the relevant key is pressed. These secondary functions are shown in the second table.





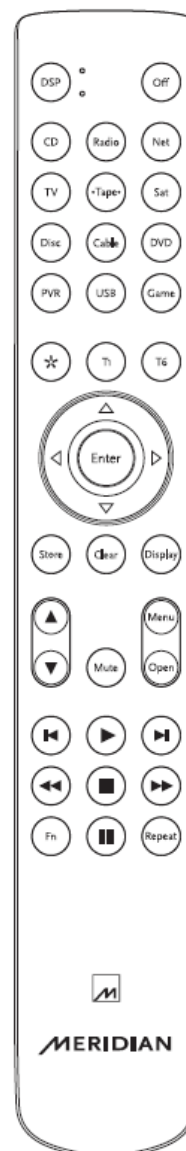






Setting up Meridian “display-type” DSP loudspeakers



The remote control features three keys aimed at facilitating the set-up of “display-type” DSP loudspeakers such as DSP8000, DSP7200, DSP5200 and their horizontally-configured counterparts. The process for configuring these models involves setting the loudspeaker to “Type 1” (two-channel systems) or “Type 6” (multichannel systems). This is done by powering up the loudspeaker at the mains while sending the number “1” or number “6” command from the remote control. In addition, the configuration menu on these models is accessed by sending the command for “0” (zero) while powering up the loudspeaker. Commands for numbers 0 to 9 are available from the remote control, but these require two keys to be held down simultaneously. Due to the fact that it can be rather difficult for one person to hold down two keys while activating the mains power switch, the remote control features special keys for this purpose. The keys “T1” and “T6” send out the commands for “1 and “6” respectively to allow Type 1 and Type 6 to be set by one person. Similarly, the “*” (star) key sends out a “0” (zero) command to allow easier access to the configuration menu.



Prime functions





Key	Function	Notes
DSP	Surround preset	Scrolls through whichever surround-sound DSP presets are available. Applies to Surround Controller products only.
Off	Standby	Switches system to Standby mode. Has no effect if the system is already in Standby mode.
CD	CD	Selects whichever source is assigned to “CD”
Radio	Radio	Selects whichever source is assigned to “Radio”
Net	Net	Selects whichever source is assigned to “Net”
TV	TV	Selects whichever source is assigned to “TV”
Tape	Tape	Selects whichever source is assigned to “Tape”
Sat	Sat	Selects whichever source is assigned to “Sat”
Disc	Disc	Selects whichever source is assigned to “Disc”
Cable	Cable	Selects whichever source is assigned to “Cable”
DVD	DVD	Selects whichever source is assigned to “DVD”
PVR	PVR	Selects whichever source is assigned to “PVR”

USB	USB	Selects whichever source is assigned to “USB”
Game	Game	Selects whichever source is assigned to “Game”
*	Config	Sends “0” (zero) command to allow access to Configuration menus on display-type DSP loudspeakers.
T1	Type 1	Sends “1” command to allow display-type DSP loudspeakers to be set to Type 1
T6	Type 6	Sends “6” command to allow display-type DSP loudspeakers to be set to Type 6
	Left cursor	Scrolls left through available menu options.
	Right cursor	Scrolls right through available menu options.
	Up cursor	Scrolls up through available menu options.
	Down cursor	Scrolls down through available menu options.
Enter	Enter	Selects options on DVD disc menus on Meridian DVD players.
Store	Store	On Surround Controller products – allows DSP presets to be assigned to sources and enables user-presets to be stored to memory. Stores specific tracks for playback on Meridian player products.
Clear	Clear	Provokes automatic assignment of “IR Controller” when system is in Standby. Clears currently selected user-preset on Surround Controller products. Clears programmed tracks on Meridian player products.
Display	Display	Scrolls through the available options for information displayed on the front-panel of a product.
	Volume up	Increases system volume.
	Volume down	Decreases system volume.
Mute	Mute	Mutes audio.
Menu	DVD menu	Selects DVD disc menu. Applies to Meridian DVD players only.
Open	Open/Eject	Opens and closes disc tray on Meridian tray-loading player products. Ejects disc on Meridian slot-loading player products.
	Previous	Selects previous track in queue on relevant streaming systems*, steps backward through tracks on Meridian player products and steps backward through tuner presets on Meridian radio tuner products.
	Play	Starts playing next track in queue on relevant streaming products*. Plays a selected track or moves to the next track on Meridian player products.
	Next	Selects next track in queue on relevant streaming products*, steps forward through tracks on Meridian player products and steps forward through tuner presets on Meridian radio tuner products.
	Fast rewind	Scans backward through track on Meridian player products.
	Stop	Stops playback of streamed audio on relevant systems*. Stops disc playback on Meridian player products.

	Fast forward	Scans forward through track on Meridian player products.
Fn	Function	Allows access to secondary functions of keys on the remote control (see note above this table).
	Pause	Pauses playback of track queue on relevant streaming products*, pauses playback on Meridian player products.
Repeat	Repeat	Selects track/chapter repeat and disc repeat on Meridian player products.

* Applies to systems supporting Sooloos or Roon and systems featuring the Meridian 210 Streamer.

Secondary (shifted) functions

Key	Shifted function	Notes
DSP	n/a	
Off	n/a	
CD	Number 1	Type 1 on display-type DSP loudspeakers. Selection of track, chapter and tuner presets on relevant Meridian products.
Radio	Number 2	Type 2 on display-type DSP loudspeakers. Selection of track, chapter and tuner presets on relevant Meridian products.
Net	Number 3	Type 3 on display-type DSP loudspeakers. Selection of track, chapter and tuner presets on relevant Meridian products.
TV	Number 4	Type 4 on display-type DSP loudspeakers. Selection of track, chapter and tuner presets on relevant Meridian products.
Tape	Number 5	Type 5 on display-type DSP loudspeakers. Selection of track, chapter and tuner presets on relevant Meridian products.
Sat	Number 6	Type 6 on display-type DSP loudspeakers. Selection of track, chapter and tuner presets on relevant Meridian products.
Disc	Number 7	Type 7 on display-type DSP loudspeakers. Selection of track, chapter and tuner presets on relevant Meridian products.
Cable	Number 8	Type 8 on display-type DSP loudspeakers. Selection of track, chapter and tuner presets on relevant Meridian products.
DVD	Number 9	Selection of track, chapter and tuner presets on relevant Meridian products.
PVR	n/a	
USB	Number 0 (zero)	Configuration of display-type DSP loudspeakers. Selection of track, chapter and tuner presets on relevant Meridian products.
Game	n/a	
*	n/a	
T1	n/a	
T6	n/a	
	Shifted left cursor	Scrolls left on secondary menus, such as those on display-type DSP loudspeakers.
	Shifted right cursor	Scrolls right on secondary menus, such as those on display-type DSP loudspeakers.
	Shifted up cursor	Scrolls up on secondary menus, such as those on display-type DSP loudspeakers.
	Shifted down cursor	Scrolls down on secondary menus, such as those on display-type DSP loudspeakers.

Enter	n/a	
Store	n/a	
Clear	n/a	
Display	Shifted Display	Scrolls through available secondary display options when using certain product combinations.
	Headphone up	Secondary volume control used by some legacy products.
	Headphone down	Secondary volume control used by some legacy products.
Mute	Headphone mute	Secondary volume control used by some legacy products.
Menu	n/a	
Open	n/a	
	Page back	Applies to Meridian DVD-Audio player products only.
	Audio	Scrolls through available audio soundtracks on Meridian DVD player products.
	Page forward	Applies to Meridian DVD-Audio player products only.
	Slow rewind	Scans back slowly on Meridian DVD player products.
	Open/Eject	Opens and closes disc tray on Meridian tray-loading player products. Ejects disc on Meridian slot-loading player products.
	Slow forward	Scans forward slowly on Meridian DVD player products.
Fn	n/a	
	Phase	Toggles the absolute phase of the audio output when playing discs on Meridian player products.
Repeat	A-B repeat	Allows a section of disc playback to be repeated on Meridian player products.

Safety information

- Never drop the remote control or expose it to moisture.
- If the remote control is not going to be used for a long period of time, the batteries should be removed.
- Use the batteries correctly to avoid possible leakage and corrosion:
 - Do not expose the batteries to direct sunlight or leave them in a high temperature environment.
 - Do not heat the batteries or expose them to flame.
 - Do not mix old and new batteries.
 - Do not use batteries of different types simultaneously.
 - Do not attempt to recharge the batteries supplied with this product.
- If battery leakage does occur, do not touch the liquid with bare hands. Remove all traces of liquid from within the battery compartment and insert new batteries.

Warranty

The MSR2 is guaranteed against defects in material and workmanship for one year from the date of purchase. See our website for full terms and conditions relating to our warranty policy.