

# Meridian 501/V and 562/V RS232 Interface.

The RS232 interface for the 501/V and 562/V can be operated from any terminal which operates at 2400 baud with 1 start bit, 1 stop bit and no parity. Commands take the form of 2 ASCII characters, in some cases followed by a signed argument ('nn' below). All characters are echoed by the preamplifier. A carriage return character will execute the command, and backspace is also implemented. When a command is executed, the preamp will return 8 characters.

The following table lists the commands available.

## Source Commands.

CD	Select CD source.	CR	Select CDR (500comms only).
RD	Select Radio.	CB	Select Cable (500comms only).
LP	Select LP.	TX	Select Teletext (500 comms only).
TV	Select TV.	V1	Select VCR 1 (500comms only).
T1	Select Tape 1.	V2	Select CDR (500comms only).
T2	Select Tape 2.	LD	Select Laser Disc (500comms only).

## Volume Commands.

VP	Volume +.
VM	Volume -.
VNnn	Goto volume number (1-99).
MU	Mute.

## General Commands.

CO	Front panel copy key equivalent.
SB	Standby.
RNnn	Move balance to right (-30 to +30).
LNnn	Move balance to left (-30 to +30).
N0	
-	Number keys.
N9	
PT	Preset (200 comms only).
TK	Track (200 Comms only).

## Additional 500 Comms Commands.

PL	Play.	CL	Clear.
ST	Stop.	DP	Decimal Point.
PS	Pause.	FF	Fast Forward.
RP	Repeat.	FB	Fast Back.
NE	Next.	MP	Menu +
PR	Previous.	MM	Menu -
DI	Display.	ML	Menu Left.
SR	Store.	MR	Menu Right.